

INSTALLATION GUIDANCE

Brass Hose Tap with Removable Key

B&M SKU: ID0152G12 Idral code: 0152G12

Installation sequence

- 1 Isolate the water supply and confirm the article, connection sizes and mounting arrangement against the technical specification.
- 2 Flush the pipes thoroughly before first use and after any temporary shutdown. Supply filtered water; consider a softener where the water has a high mineral content.
- 3 Fit the tap to the wall connection using the mounting arrangement and dimensions in the technical sheet. Protect the finish and avoid stressing the body.
- 4 Provide an accessible isolation valve upstream. For pre-mixed supplies, Idral recommends a thermostatic mixing valve.
- 5 Where flexible hoses are fitted, keep them accessible, free of tension and sharp bends, with an approximately 90 mm minimum bend radius. Tighten the hose connections by hand as directed by Idral.
- 6 Restore the supply gradually, inspect every joint for leaks and check operation. Leave the product accessible for inspection and service.
- 7 Protect the tap against temperatures below 5 C. Drain residual water before frost exposure.

Important

Based on Idral ISTA38-01 where linked to this article. Its normal operating range is 1-6 bar, recommended 2-4 bar, and 5-65 C. Product-specific technical ratings are listed in the technical specification.