

INSTALLATION GUIDANCE

Female Angle Valve 3/8

B&M SKU: ID0182C38X38 Idral code: 0182C38X38

Installation sequence

- 1 Isolate the water supply and confirm the article, connection sizes and mounting arrangement against the technical specification.
- 2 Flush the supply pipework before connecting the product. Keep debris and excess jointing material out of the waterways.
- 3 Match every inlet and outlet thread or tube connection to the drawing. Position the control so it remains accessible after installation.
- 4 Make the specified connections with suitable seals. Support the body while tightening and avoid overtightening or loading the pipework.
- 5 Restore the supply gradually, inspect every joint for leaks and check operation. Leave the product accessible for inspection and service.

Important

Installation guidance based on the product technical information. Follow the accompanying dimensional drawing and have the work completed by a competent installer.