

CARE AND MAINTENANCE

Under Basin Ball Valve

B&M SKU: ID0188 Idral code: 0188

Routine care

- Wash exposed surfaces with soap and water, then wipe with a soft cloth.
- Avoid aggressive cleaners, abrasive pads and solvents that may damage the finish.
- Check accessible connections and moving parts regularly. Replace damaged seals or worn components with compatible parts.

Service

Use compatible replacement parts. Isolate the water supply before servicing a connected water fitting.