

INSTALLATION GUIDANCE

Under Boiler Thermostatic Mixer

B&M SKU: ID09029 Idral code: 09029

Installation sequence

- 1 Isolate the water supply and confirm the article, connection sizes and mounting arrangement against the technical specification.
- 2 Use the supplied installation kit and stainless steel filters. Follow the under-boiler connection layout in the technical specification.
- 3 Connect the hot, cold and mixed waterways to their marked ports. Keep the unit accessible for adjustment and filter service.
- 4 Operate within 1-5 bar, recommended 2-4 bar. The hot inlet maximum is 80 C and the recommended hot supply is 60 C.
- 5 Commission at normal supply conditions and measure the mixed outlet temperature. Check all connections for leaks and confirm stable delivery.

Important

Installation guidance based on the product technical information. Follow the accompanying dimensional drawing and have the work completed by a competent installer.